



Engineered Products

340 E Germann Road, Suite 113 • Gilbert AZ 85297-0614 • USA

ICA

Revision: IR  
Issued: 6/26/2020

**T-714 Instructions For Continued Airworthiness**

<b>Subject:</b>	Airworthiness Limitations
<b>Part Number:</b>	2E6-011-150-105
<b>Installations:</b>	Bell 206A, 206B, 206L, 206L-1, 206L-3, and 206L-4
<b>Revision History:</b>	IR – 6/26/2020 Initial Release
<b>Reason:</b>	This document sets forth the FAA-approved mandatory replacement times for the life-limited parts listed and instructions for continued airworthiness (ICA) herein.
<b>Description:</b>	The schedule below summarizes the airworthiness limitations of the parts/articles shown. The airworthiness life shown in Table 1 is the maximum time these parts/articles may remain in service. They must be removed from service before the airworthiness life is exceeded.
<b>Applicability:</b>	See Table 1.
<b>FAA Approval:</b>	<p>Approved By: <u>MAUREEN A MORELAND</u>  <small>Digitally signed by MAUREEN A MORELAND Date: 2020.08.24 14:44:26 -07'00'</small></p> <p>Manager, Airframe Section Federal Aviation Administration Los Angeles ACO Branch</p> <p>Date of Approval: <u>August 24, 2020</u></p>
<b>Airworthiness Limitation:</b>	<p>The airworthiness limitations applicable to EXTEX parts/articles have been substantiated through test to be the same as those of the Type Certificate Holders (TCH) parts/articles. The airworthiness limitations are listed in Table 1.</p> <p><u>Airworthiness Limitation Schedule</u> The Airworthiness limitations section is FAA approved and specifies maintenance required under CFR 14 part 43.16 and 14 CFR part 91.403 of the Federal Aviation Regulations, unless an alternative program has been FAA approved.</p> <p>The airworthiness life or inspection interval for any part/article contained in this schedule applies to all successive dash numbers for that component unless it is otherwise specified.</p>
<b>Instructions for Continued Airworthiness:</b>	<p>As a part of the FAA approval process, EXTEX demonstrates that the TCH ICA are applicable to EXTEX replacement articles.</p> <p>Bell maintenance instructions (See Table 2) are applicable in all respects except EXTEX part numbers are not included in Bell manuals.</p> <p>All work must be performed at a FAA approved repair facility.</p> <p>Refer to the TCH ICA for any additional requirements.</p>
<b>Notes:</b>	Return parts that have attained their maximum airworthiness life to EXTEX. Please contact your EXTEX representative with any questions.



Engineered Products

340 E Germann Road, Suite 113 • Gilbert AZ 85297-0614 • USA

ICA

Revision: IR  
Issued: 6/26/2020

**T-714 Instructions For Continued Airworthiness**

Table 1: Airworthiness Limitation Schedule

Nomenclature	Part Number	Airworthiness Life (Hours)	Application	Mandatory Inspection Interval (Hours)
Fitting Assy	2E6-011-150-105	2400	206A, 206B, 206L, 206L-1, 206L-3, and 206L-4	1200

Table 2: Maintenance Instructions

Manual Title	Document Reference No.
Bell Model 206A/B Series Maintenance Manual Volume 1	BHT-206-A/B-MM-1
Bell Model 206L Maintenance Manual Volume 1	BHT-206L-MM-1
Bell Model 206L1 Maintenance Manual Volume 1	BHT-206L1-MM-1
Bell Model 206L3 Maintenance Manual Volume 1	BHT-206L3-MM-1
Bell Model 206L4 Maintenance Manual Volume 1	BHT-206L4-MM-1
Bell Model 206B3 Component Repair and Overhaul Manual Volume 3	BHT-206B3-CR&O-3
Bell Model 206L Series Component Repair and Overhaul Manual Volume 3	BHT-206L-CR&O-3
Bell Standard Practices Manual	BHT-ALL-SPM